


LAYOUT  
M 1:100

Plan view with foundations and locations of columns of JG, their axes and numbering

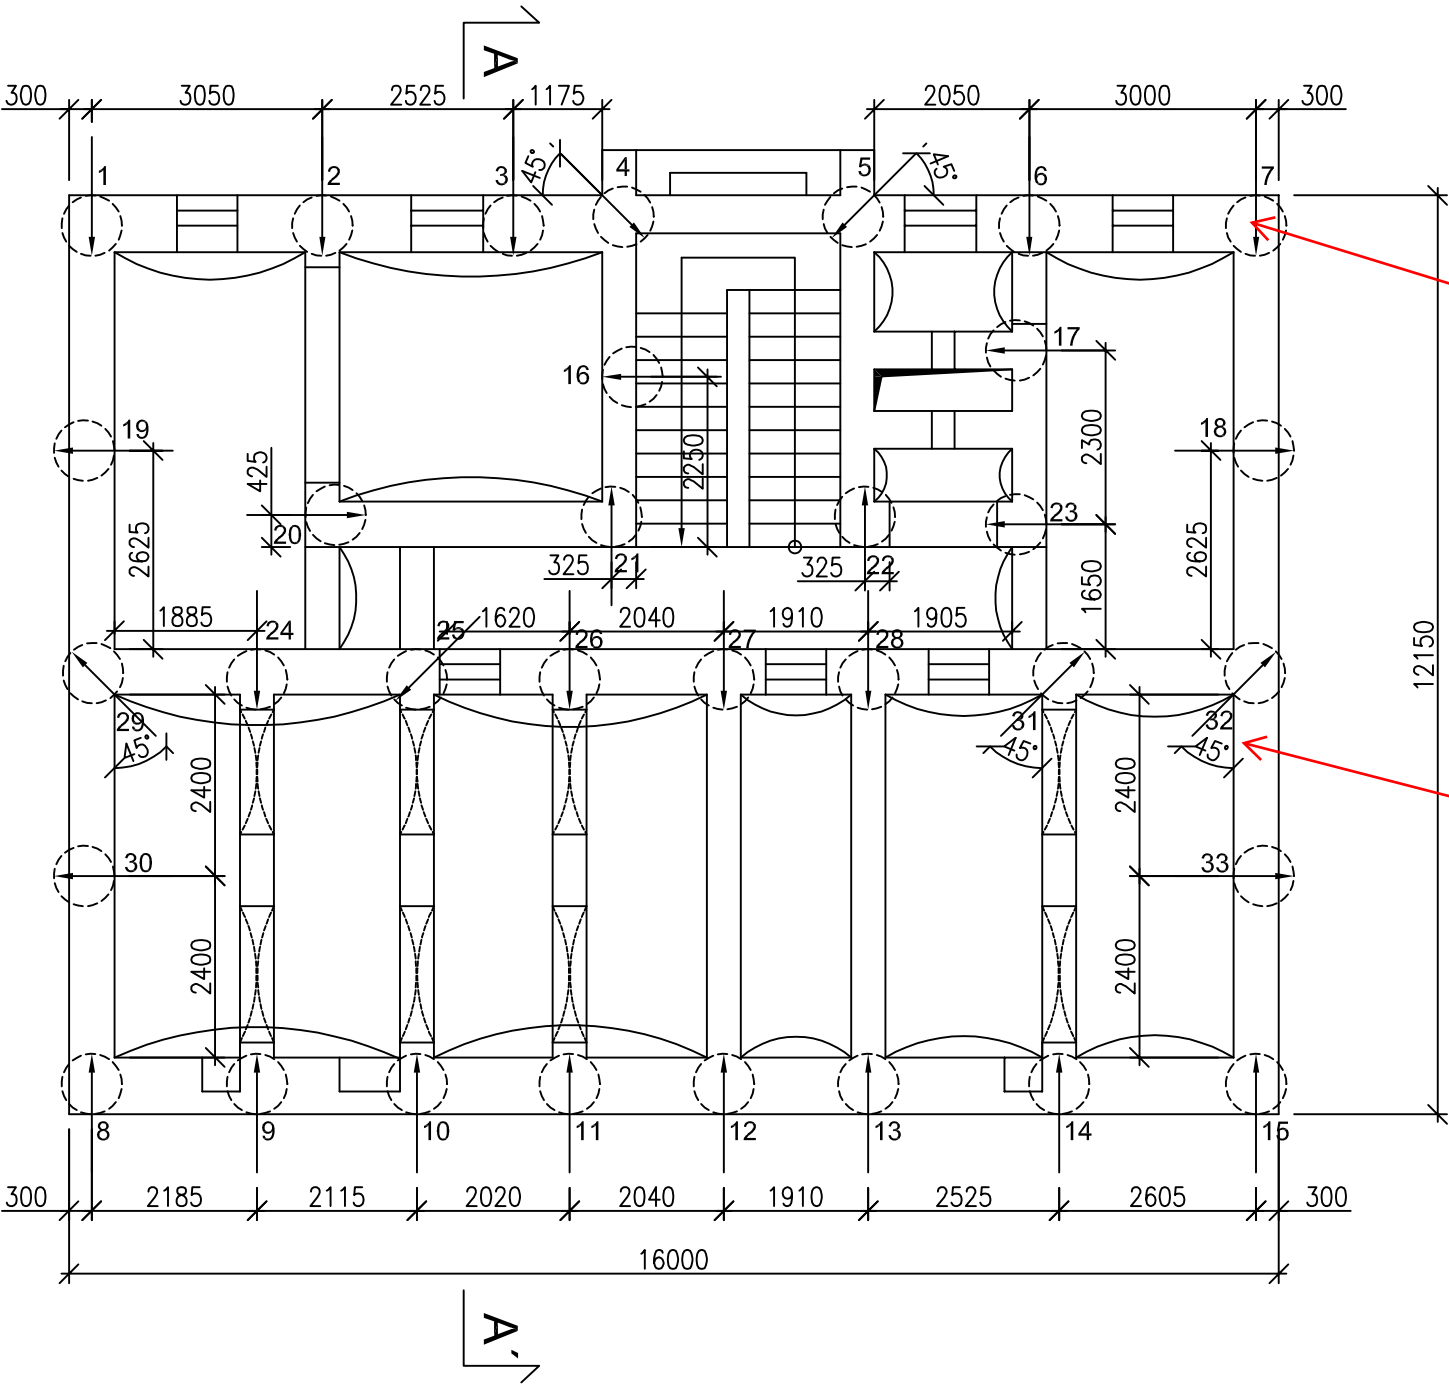

arrow marks indicate locations of axes and boring directions for JG

borings are perpendicular to foundation,

horizontal inclinations of borings are indicated with respect to foundations in building corners

CROSS SECTION A - A'  
M 1:100

Section/sections through the system of foundations  
with locations of JG columns with their specifications

